


LV-110M-RB メッシュローチェア30 リッチブラック

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、折り畳み機能を有する一人掛けの椅子です。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容 (各部の名称)

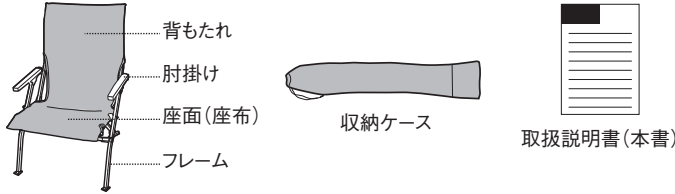

スペック

- 材質：フレーム/アルミ合金(アルマイト加工)、ひじ掛け/竹集成材、金具/ステンレス、シート/ポリエステル。
- サイズ：幅580mm×奥行650mm×高さ860mm(シート高300mm)
- 収納サイズ：幅160mm×奥行180mm×高さ1010mm
- 重量：3.6Kg

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。


⚠ 警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。

- ご使用前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。
- ランタンやバーナー・焚火などの火気や、高温の物の付近でのご使用には十分ご注意ください。椅子の変形、火災の原因になります。

⚠ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。


- 地盤のしっかりした平坦な場所を選び、凹凸のある場所や傾斜地で使用しないでください。
- 床面がフローリングや畳等の場所は、床にキズをつける可能性がありますので敷物を敷いてください。
- 可動するフレームに指を挟まないよう注意し、ゆっくりと開閉を行ってください。また開閉途中の状態では放置しないでください。
- ご使用の際、着衣しているものや、身につけているものの金具などが引っかかり、思わぬ事故が発生する恐れがあります。十分にご確認ください。
- 転倒の恐れがありますので、浅く腰を掛けたり、横座りをしたり、肘掛けから体を乗り出すなど、無理な姿勢で使用しないでください。また座る目的以外には使用しないでください。
- 変形や破損の原因となりますので、衝撃を加えたり激しくゆする行為はしないでください。またローチェアは構造的に座面が低いため、着座時は座面に大きな荷重が掛かりやすくなりますので、特にご確認ください。
- お子様を座らせるときは、必ず大人の管理のもとで使用してください。思わぬ事故や怪我の発生の恐れがあります。
- 座布の生地は難燃素材ではありません。火気のそばでは使用しないでください。
- 本製品の肘掛けは、ご使用状況や保管状況により反りや歪み、割れが発生することがあります。暖房の熱が直接伝わる場所や、長時間直射日光に当たる場所や、夏場の車内では保管や使用はしないでください。
- 雨中に放置したりなど長時間水分と接触していると、塗膜の内部に水分が浸透し、染みや変色、反りや狂い、カビの原因になることがあります。
- 硬いものや尖ったものに接触すると、キズの原因となります。
- 運搬時、座布が突起物に引っかからないようご注意ください。
- 肘掛け部の塗膜が破損すると湿気を吸収しやすくなり、染みや変色、反りや狂い、カビの原因になることがあります。
- ご使用により肘掛け表面が退色や変色することがあります。また局所的に温度が上がると、退色や変色が進行することがあります。
- 肘掛け部は天然の竹を加工、集成したものです。色の濃淡や風合いは個々の特性です。天然の色や風合いをお楽しみください。
- 製品に衝撃を与えると、金具が変形し開閉に支障が出ますので、取り扱いに十分注意してください。
- アルミフレームは有色のアルマイト加工(酸化被膜)を施しています。硬いものや尖ったものに接触したり、擦れたりするとキズが付き、素地が露出することがあります。

使用方法

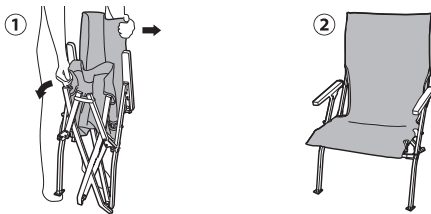

- ① 図のように対角線上にある、背もたれと、座面のフレームを持って開きます。(肘掛けを持って開閉しないでください。)
- ② 完全に開いていることを確認後、使用してください。

収納方法

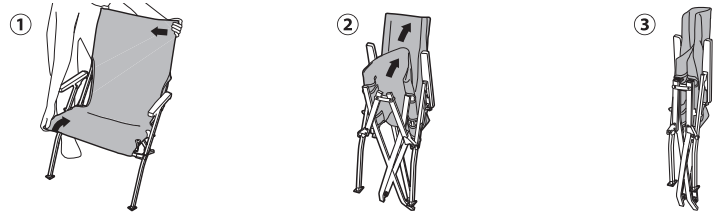

- ① 背もたれと座面のフレームを持ち、内側に閉じていきます。
- ② 閉じる途中で、座布を背もたれの後ろ側に軽く押し出します。
- ③ フレームを完全に閉じます。収納ケースに収めて完了です。

メンテナンスについて

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。
- 使用後は汚れ、水分などをよく取り除いて保管してください。
- 肘掛けの汚れは、薄めた中性洗剤を浸した布で汚れを落とし、その後水を濡した布で洗剤分をよく拭き取ってください。次に乾いた布で軽く拭いた後、日陰で自然乾燥させてください。
- 座布のお手入れはブラッシングや掃除機で編み目のほこり等を取り除いてください。
- 座布がコーヒー、お酒等で汚れた場合は、中性洗剤を3~5%位にお湯で薄め、柔らかい布に浸し、軽く絞って表面をたたくようにして拭き取ってください。後は洗剤をよく布で拭き取り、日陰で自然乾燥させてください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1. 素材の経年劣化による損害など商品の寿命 / 2. 改造および粗雑な取扱いによる故障 / 3. 取扱説明書で禁止されている取扱いによる故障 / 4. 不測の事故による商品の故障 / 5. その他製造上の欠陥以外による製品の故障 / 6. ゴミやさびによる故障 / 7. 分解したことによる不具合の発生または破損 / 8. 落下やその他の衝撃による部品の変形や破損による不具合 / 9. 摩擦によるパーツの変化及びそれによる故障 / 10. 他社製品との組み合わせによる故障


修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。
- 修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
- 修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
- 修理品の運賃並びに修理費については以下のように規定させていただきます。1. 保証対象の場合：往復運賃並びに修理費は弊社にて負担いたします。 / 2. 保証対象以外の場合：往復運賃並びに修理費は、お客様のご負担とさせていただきます。

**LV-110M-RB
Mesh Low Chair 30 Rich Black**

Thank you very much for purchasing a Snow Peak product. This product is a chair for one person with folding function. Please be sure to read this instruction manual for safe use of the product and after reading it, put it in a safe place for future reference. Snow Peak makes every effort to ensure that all products operate properly but please make sure to set up the product before you use in the field and check how to use and attached parts. If you find anything in the instruction manual that is difficult to understand or defect on the product, please stop using the product and contact the retail store you purchase the product or Snow Peak user service.

Set Contents (Name of the Parts)

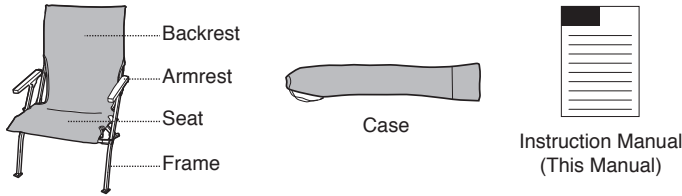

Specifications

- Material: Frame / Aluminum alloy (alumite coating.), armrest / bamboo laminated wood, Clasp/ Stainless Steel, Seat / Polyester.
- Size: 580mm x 650mm x 860mm (22.8" x 25.6" x 33.9") (Seat height 300mm/11.8")
- Storage size: 160 mm x 180 mm x 1010 mm (6.3" x 7.1" x 39.8")
- Weight: 3.6Kg (7.9 lb)

Before use: please read thoroughly to ensure safety and avoid accidents.


⚠ WARNING / Misuse could result in serious injury or death to the user.

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- Be careful using around fire or heat source like a camping burner, lantern and fire place. It may deform the chair and cause a fire.

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.


- Choose even place to place this product and do not use this on uneven places.
- When you use this product on wooden floor or tatami mat, there may be a possibility of damaging the floor so please make sure to use a carpet.
- Open and close the chair slowly in order to avoid your fingers to be caught in the moving frame. Also please do not leave the chair halfway to close.
- When using this product, use caution to avoid catching your clothes on the joints.
- Do not sit with unnatural posture as it may trip over. Also do not use this product other than the purpose of sitting down.
- Do not sit with great impact or shake violently as it may cause deformation or breakage of the product. Also the seat is low so when you sit down, a heavy load is easily to load on the seat so please be careful.
- When you let your children to sit on this chair, please use it under your observation. There is a danger of unexpected accident or injury.
- The material of this product is not flame-proofed. Do not use this product near fire.
- The armrests of this product may have a warpage, deformation or clack depending on the use or storage situation. Please do not store or use this product where the heat from heater is directly there or place where direct sunshine is shining, inside car during summer.
- If you leave this product under rain for long time, it may cause a stain, discoloration, warpage, mold.
- Please avoid to touch a hard or sharp thing as it may cause scratch.
- When transporting, be careful to avoid catching the seat cloth on nearby objects.
- If a coating on the armrests are damaged, it become easy to get moisture and cause a stain, discoloration, warpage, mold.
- There is a case of discoloring on the armrests by usage. Also if the temperature is rapidly up, it may progress the discoloring.
- The armrest use natural bamboo laminated materials. The color difference is it's character. Please enjoy the natural color.
- When you give impact on this product, it may deform the clasp and may damage the open/close system so please pay attention.
- The aluminum frame is treated with colored alumite (oxide film). Prolonged contact or friction with sharp objects may scratch off the film and expose the substrate.

How to use

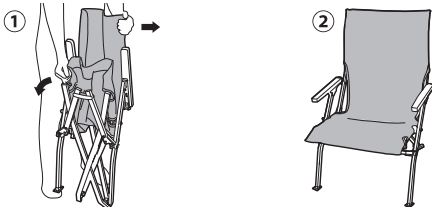

- ① As shown in the drawing, open the backrest and frame of the seat.
- ② Confirm the chair is completely opened before use.

How to store

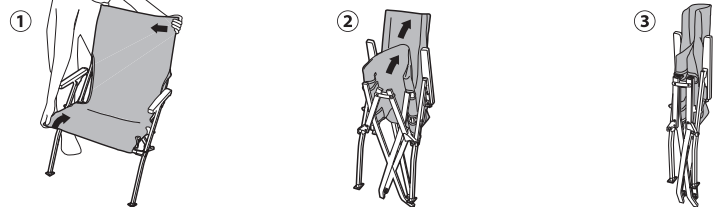

- ① Hold the backrest and frame of the seat and close inward.
- ② Before completely closed, lightly push out the seat behind the backrest.
- ③ Close the frame completely. Do not open it with armrest.

How to maintenance

- When using a product that has been stored for a long time, please contact Snow Peak Customer Service for inspection.
- After the use, take out the dirt/moisture well and store the product.
- For the dirt on the armrests, take it out using a cloth soaked with mild detergent and use a cloth soaked with a water to take out the mild detergent. Then use dried cloth to wipe and dry the product well in a shadow naturally.
- Use brush or vacuum cleaner for maintenance the seat.
- When the seat became dirty with coffee or liquor, etc, dilute mild detergent by 3 to 5 % in a hot water and soaked with soft cloth and wipe the surface. Wipe the detergent with a cloth well and dry it naturally.

Warranty

The specifications of Snow Peak products are based on field testing and quality control to ensure the correct function and longevity of every product. If apparent defects in the manufacturing of the product are found, the defective product will be repaired or exchanged free of charge. Damages, as follows, are not covered under warranty. / 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by improper use not following the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Damage not caused by defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage or defects caused when dismantling the product. / 8. Damage and defects caused by dropping or other shocks to the product. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with other maker's products.

Repair

- For repairs, please contact the retailer where you purchased the product or Snow Peak user service.
- When you ask for repair, please make sure that the product is dry and clean.
- Please attach a memo or some kind of tag indicating the needed repair, and please write details of when and how the damage occurred.
- Shipping cost and repair fee for the repair as follows. 1. Within warranty: Return shipping cost and repair fee will be covered by Snow Peak / 2. Outside warranty: Return shipping cost and repair fee will be covered by the user.