


BG-240 / BG-260 / BG-290 OTダッフルバッグ 45 / 65 / 90

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品はアウトドアや旅行用としてお使いいただけるダッフルバッグです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止し、ご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容 (各部の名称)

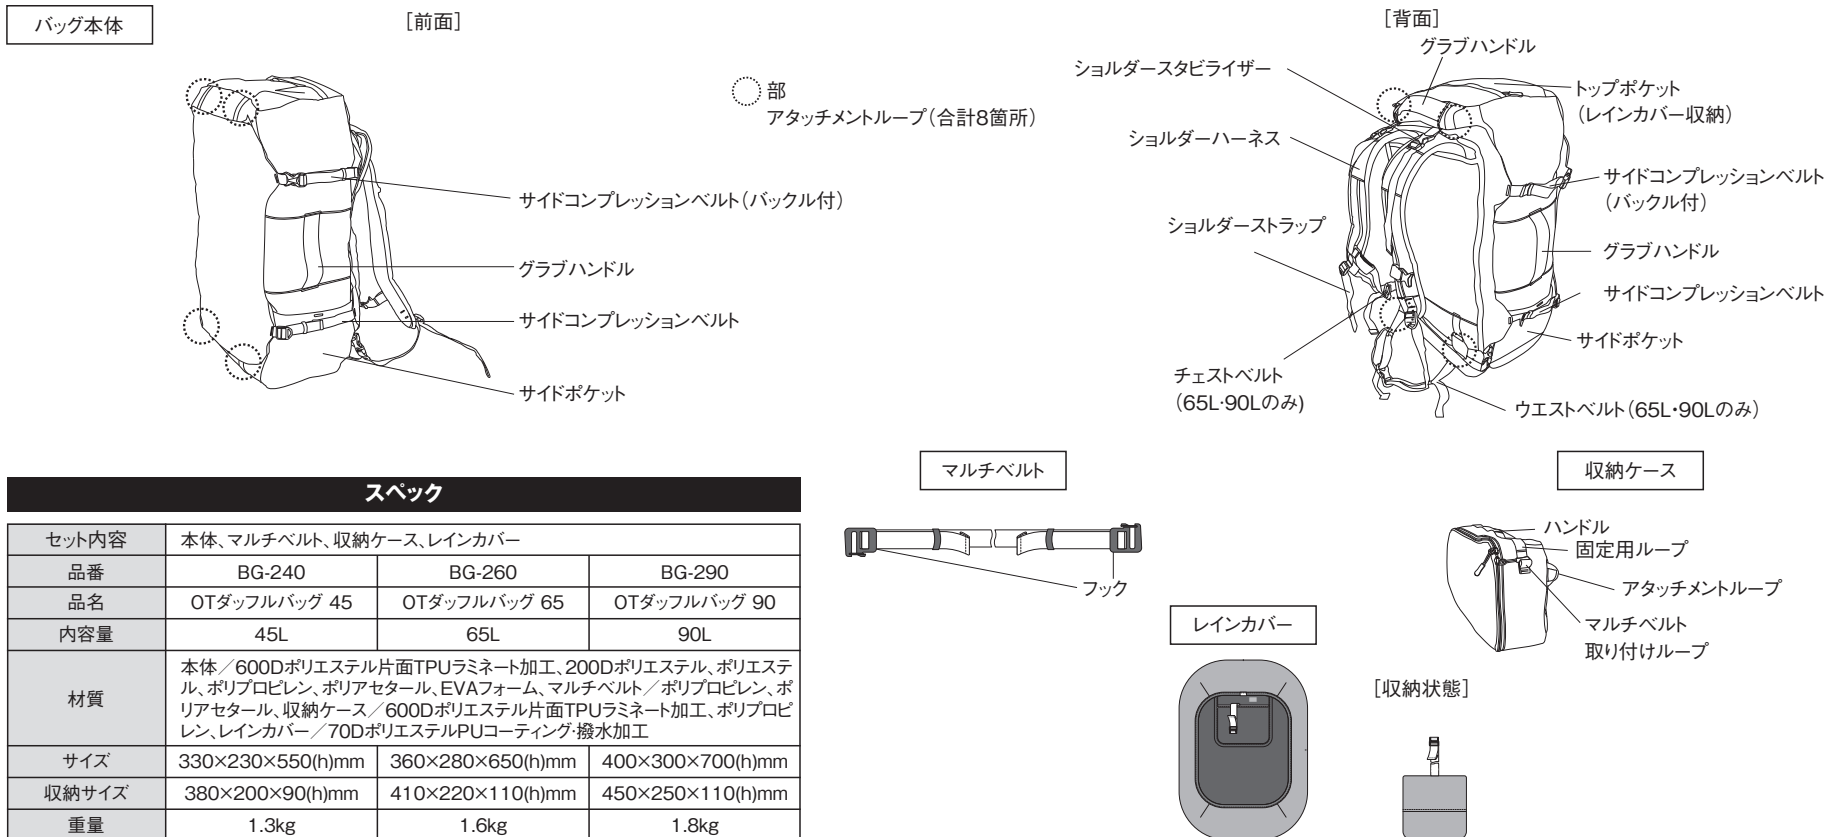

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。


- ご使用前に本製品を点検し、各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。
- 本製品の素材は難燃性素材ではありません。火気周辺での放置や、熱いものを入れる行為はお止めください。生地が溶けるなど、破損の原因となるおそれがあります。
- 本製品は防水仕様ではありません。雨天時や濡れる環境でご使用の際は付属のレインカバーをお使いください。ただし、レインカバーを装着しても内部が濡れる場合がありますので、濡れてほしくないものは防水性のある袋などで個別にカバーしてください。
- ご使用前にストラップ留具等の接続部がしっかり固定されていることをご確認のうえお使いください。
- 過度に重い物を入れないでください。生地の破損、破れの原因となります。
- 摩耗、水漏れ、雨水、汗の影響によって色落ちや他のものへ色移りすることがあります。
- 屋外での放置は製品の劣化、退色の原因となります。ご使用後も、直射日光を避けて保管してください。
- 保管の際は高温多湿な場所を避け、通気性の良い場所に置いてください。

- 中身を入れた状態で製品を引きずらないでください。持ち手や生地の破損・破れ、穴空きの原因となります。
- 運搬時は必ずファスナーやバックルなどを閉めてください。また蓋が閉められないほどの量を入れないでください。中に入れたものが落下するおそれがあります。
- 生地外面にTPU加工を施しております。製品内側に湿気がこもる場合がございますので、湿気に弱いものの長期保管は避けてください。
- 素材の特性上、折りたたみを繰り返すと跡が残ります。使用上には問題ございません。
- 持ち上げる際は、両手で向かい合う2本のハンドルをまとめて持つか、両方のショルダーハーネスを均等に持つください。片側のみを持ち上げると、本体や縫製部を傷めるおそれがあります。
- 本製品は荷物運搬用のバッグです。生き物を入れて運搬しないでください。また、事故やケガのおそれがあるため、幼児が中に入らないように十分注意してください。
- 先端が鋭利なものをそのまま収納すると、破損や思わぬ事故の原因となるおそれがあります。必ず保護したうえで収納してください。

使用方法

●荷物を入れる


- ①ショルダースタビライザーをはずしてください。
- ②ファスナーを開けて荷物を入れてください。

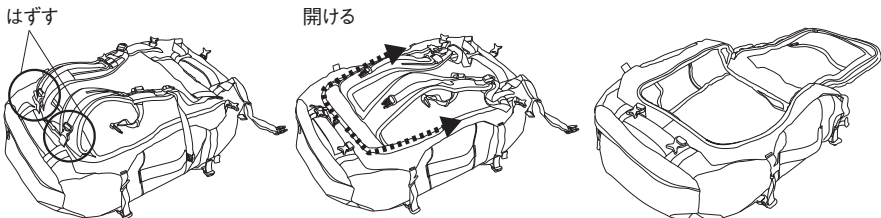


●リュックタイプにセッティングする

※ファスナーが完全に閉じていることを確認してください。また、ファスナーの合流位置が角部になると、背負う際に開いてしまうおそれがあります。


- ①ショルダーストラップのバックルオスと本体下部のバックルメスを取り付けてください。

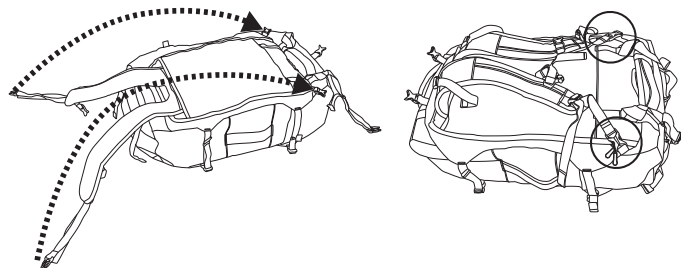

- ②ショルダースタビライザーを取り付けてください。
※背負う際は必ず、ショルダースタビライザーを取り付けてください。

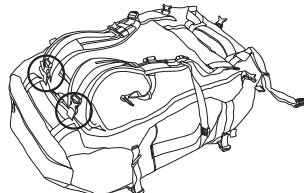


- ③ウエストベルトを取り付けてください。※65L、90Lのみ。

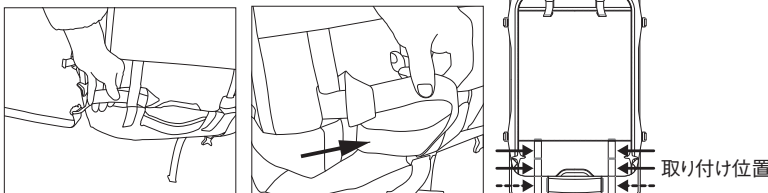


※高さが合わない場合は、アタッチメントループに取り付けることも可能です。


- 背負い方**
- ①本体を背負い、腹部を圧迫しないように腰骨部でウエストベルトを締めてください。
※ウエストベルトは65L、90Lのみ付属。
 - ②ショルダーハーネスが体にフィットするようにショルダーストラップを引いてください。
フィット感が弱い場合はウエストベルトの位置を調整して体にフィットする高さに調整してください。
 - ③ショルダースタビライザーを引き、上部の重心を体に引き寄せ安定させてください。
 - ④ショルダーハーネスを安定させるためにチェストベルトをとめてください。※65L、90Lのみ。

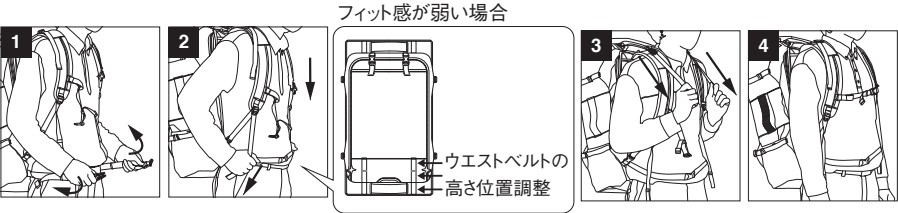

- コンテナタイプにセッティングする**
- ①ショルダーハーネスのバックルをはずしてください。
 - ②ショルダーハーネスを背面の収納ポケットに収めてください。

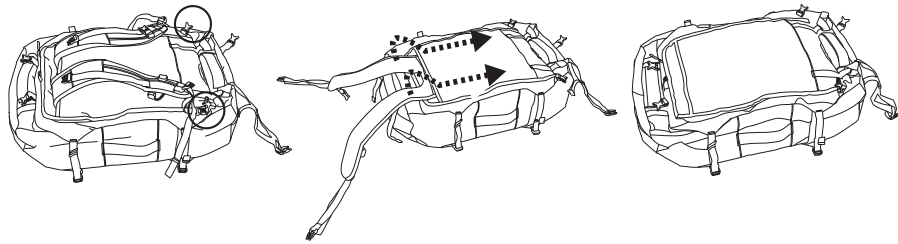


●**マルチベルトの使い方**

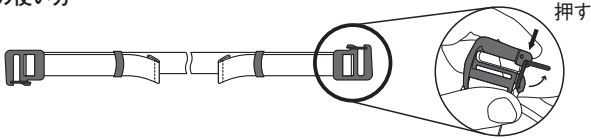


- ・マルチベルトの両端のフック上部を図のように押してロックをはずしてください。
※フックのロックは、勢いよくはずれますのでご注意ください。
- ・取り付けの際は、ロックを戻してフックの爪部分からはずれないようにしてください。

[バッグ本体への固定]

- ※上側・下側どちらにも取り付け可能です。
- ①背面側のアタッチメントループにマルチベルトを通してください。
- ②荷物を載せます。
- ※収納ケースを取り付ける場合は、収納ケース上部にある固定用ループに、マルチベルトを通して固定してください。
- ③前面側のアタッチメントループにマルチベルトのフックを引っ掛けて固定してください。

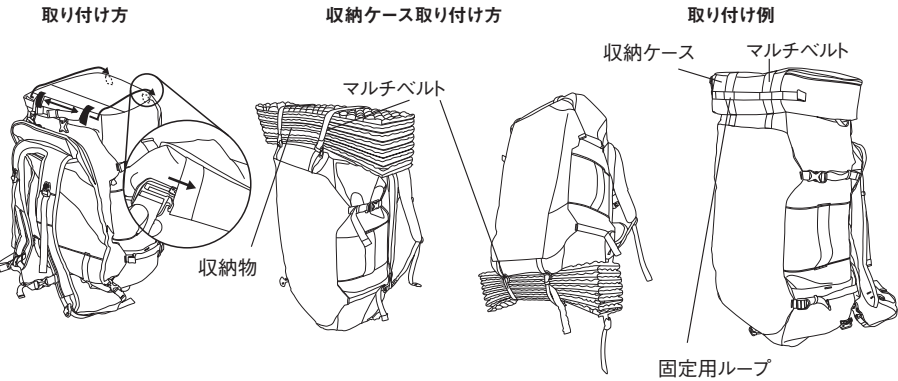


- [ショルダーポーチとしての使い方]
- 取り付け例
- 図の位置にマルチベルトのフックを取り付けてください。

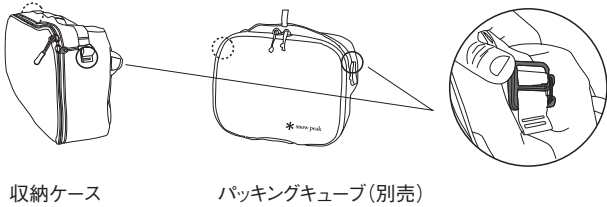

●**圧縮と固定**

- ①**バッグ本体の圧縮**
バッグ本体左右にあるサイドコンプレッションベルト(4箇所)を締めると、バッグ本体を圧縮することができます。




※反対側も同様。

- ②**長さのある収納物の固定**
長さのある収納物は、サイドコンプレッションベルトで固定できます。
状況に応じてサイドポケットを使用して固定してください。




- ③**収納ケースの取り付け**
サイドコンプレッションベルト(バックル付)を収納ケースのアタッチメントループに通すと、バッグ本体に取り付けることができます。

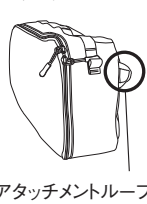

サイドコンプレッションベルト(バックル付)


●**レインカバーの着脱方法**

- ①レインカバーケースからレインカバーを取り出します。
- ②バッグ本体の上からかぶせ、下側まで引っ張って装着します。
※上部に荷物を取り付けている場合や、サイドコンプレッションベルトに大きな収納物がある場合、レインカバーがかけられないことがあります。
- ③使用後はレインカバーの水分や汚れを落としてください。
- ④レインカバーをたたみ、レインカバーの内側にあるレインカバーケースに収納してください。

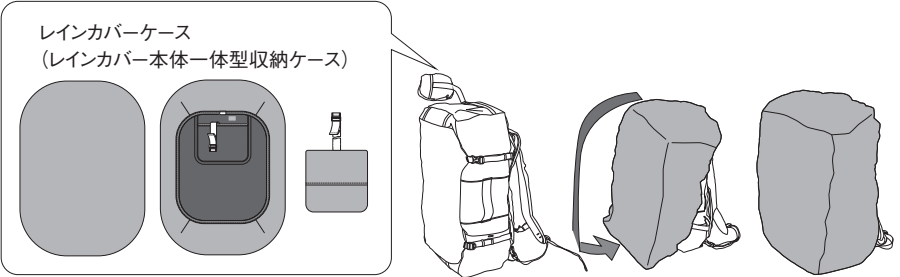

●**収納ケースへの収納方法**

- ①バッグの中にも何も入っていないことを確認してください。
- ②「●コンテナタイプにセッティングする」を参照し、ショルダーハーネスを背面の収納ポケットに収めてください。
- ③ショルダーハーネス側を上にして置き、本体の横幅に沿うように側面の厚み部分を内側へ折り込んでください。
- ④下側からゆっくり折りたたみ、収納ケースに収まるように調整しながらたんで収納ケースに入れてください。

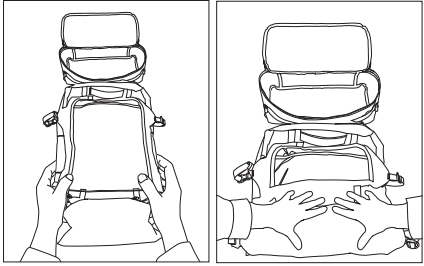

メンテナンスについて

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービスに点検または修理を依頼してください。
- 漂白剤、乾燥機、洗濯機の使用は避けてください。
- 汚れを落とす際にはよく絞った布などで拭き取ってください。
- 汚れがひどい場合は、洗濯用洗剤を薄めて水またはぬるま湯で優しく手洗いしてください。洗った後は形を整え、直射日光を避けて陰干してください。

- シンナー、ベンジン、アルコールなどの有機溶剤の使用は色落ち、変色および樹脂加工の剥がれなどの原因となりますのでおやめください。
- 生地のコーティング、テープ、プラスチックなどのパーツ類は摩耗や経年劣化により耐久性が衰えていきます。
- 本製品を濡らした状態で長期間放置しないでください。シミや悪臭、劣化の原因となります。
- ご使用後や汚れを拭き取った後はよく陰干しをし、直射日光を避け、風通しの良い場所で保管してください。
- ご使用により広範囲にわたり素材が劣化し、耐久度合を超えたものは修理できない場合があります。
- 長期間、収納ケースに入れたまま保管しないでください。湿気がこもり、シワや劣化の原因となります。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。

- | | | |
|--------------------------|-------------------------------|-------------------------|
| 1. 素材の経年劣化による損害など商品の寿命 | 5. その他製造上の欠陥以外による製品の故障 | 9. 摩擦によるパーツの変化及びそれによる故障 |
| 2. 改造および粗雑な取扱いによる故障 | 6. ゴミやさびによる故障 | 10. 他社製品との組み合わせによる故障 |
| 3. 取扱説明書で禁止されている取扱いによる故障 | 7. 分解したことによる不具合の発生または破損 | |
| 4. 不測の事故による商品の故障 | 8. 落下やその他の衝撃による部品の変形や破損による不具合 | |

修理について

- 本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。
 - 修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。
 - 修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。
 - 修理品の運賃並びに修理費については以下のように規定させていただきます。
1. 保証対象の場合: 往復運賃並びに修理費は弊社にて負担いたします。
2. 保証対象以外の場合: 往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピークユーザーサービス
☎0120-010-660(9:00~17:00)
Email: userservice@snowpeak.co.jp


株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel. 0256-46-5858 / Fax. 0256-46-5860
www.snowpeak.co.jp

MADE IN VIETNAM

BG-240 / BG-260 / BG-290
OT Duffel Bag 45 / 65 / 90

Thank you for purchasing a Snow Peak product. This product is a duffel bag designed for outdoor use and travel. For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents (Name of the Parts)

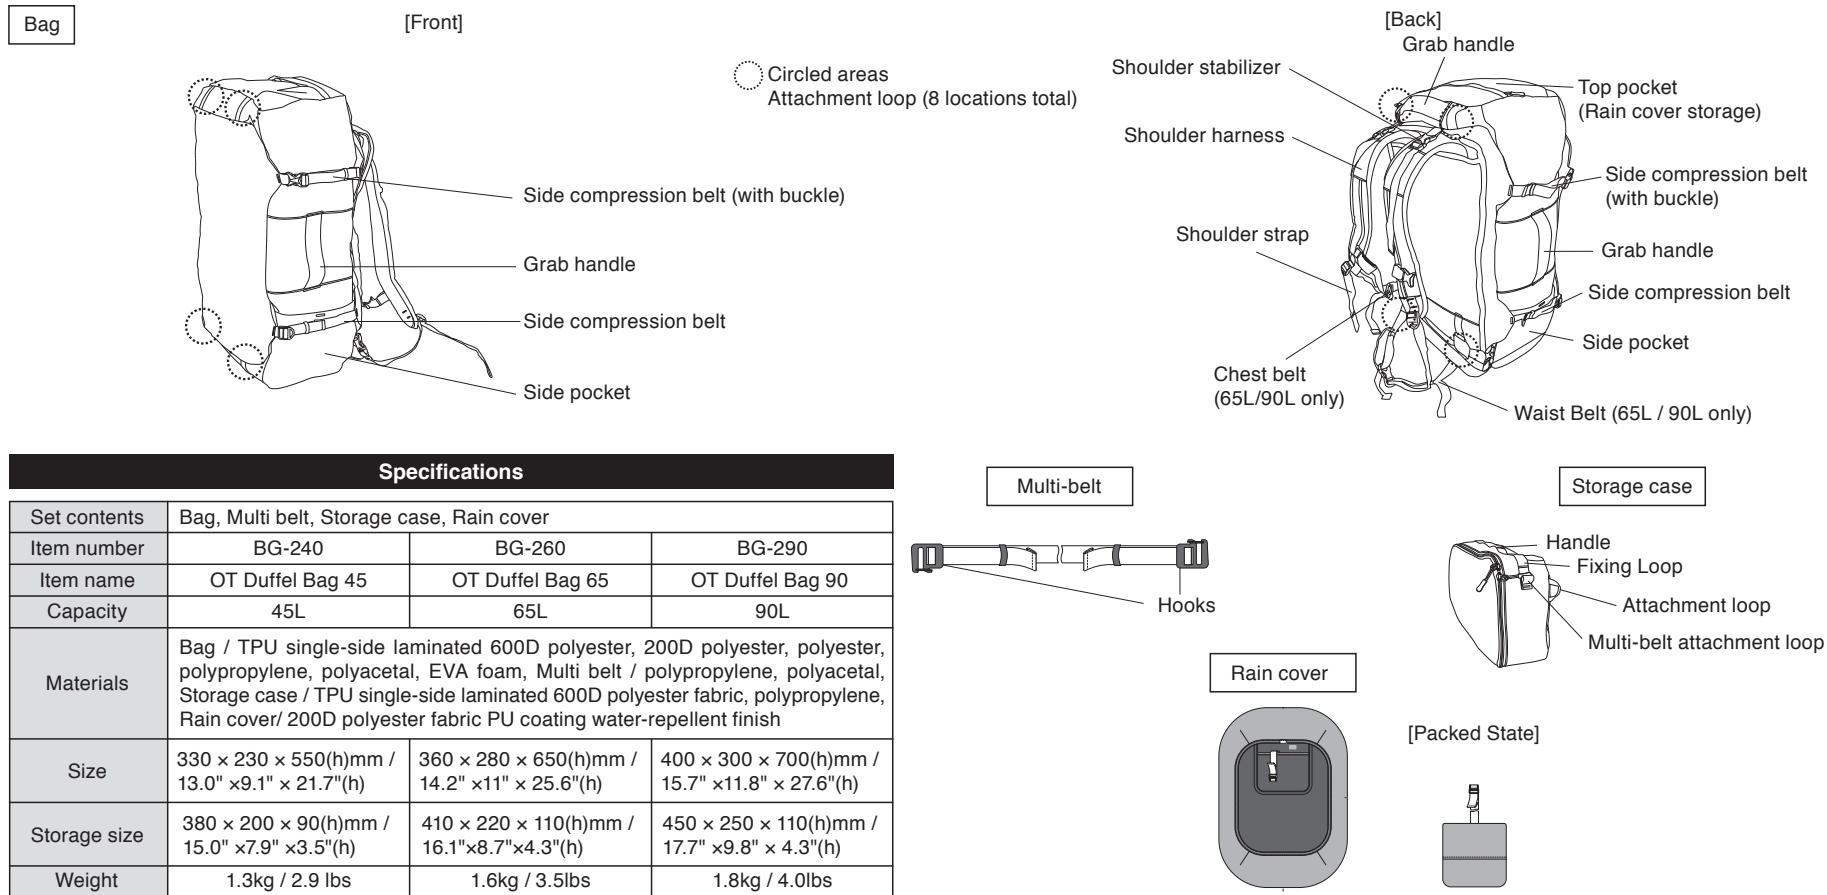

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.

⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.


- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- This product is not made of flame-retardant material. Do not leave this product near any heat source or put anything hot inside it. It may result in melting the fabric or otherwise damaging this product.
- This product is not waterproof. Use the included rain cover during rain or in wet conditions. Even with the cover, internal moisture may occur; protect sensitive items in waterproof bags.
- Before use, ensure all straps and buckles are securely fastened.
- Do not pack excessively heavy objects. They may damage or tear the fabric.
- This product may fade or stain other objects by wear or when wet or dampened with leaked water, rainwater, or sweat.
- Prolonged exposure to the outdoors may cause deterioration or fading. Store this product away from direct sunlight after use.
- Store this product in a well-ventilated area away from heat and moisture.
- Do not drag the product when loaded. This may cause the handles or fabric to break, tear, or

- puncture.
- Always close zippers and buckles when carrying. Do not overfill to the point that the lid cannot close. Items inside may fall out.
- The exterior fabric features a TPU coating. Moisture may become trapped inside the product; please avoid long-term storage of items sensitive to humidity.
- Due to material characteristics, repeated folding will leave marks. This does not affect performance.
- When lifting, use the two handles facing each other with both handles together or both shoulder harnesses equally. Lifting the bag by only one side may damage the bag or the stitched sections.
- This product is a bag designed for carrying items. Do not use it to carry living creatures. Additionally, to prevent the risk of accidents or injury, ensure that infants or young children do not climb inside.
- Storing sharp objects without protection may lead to damage or unexpected accidents. Always ensure they are properly covered or protected before storage.

How to use

•Packing your items


- ① Detach the shoulder stabilizers.
- ② Open the zipper and place your items inside.

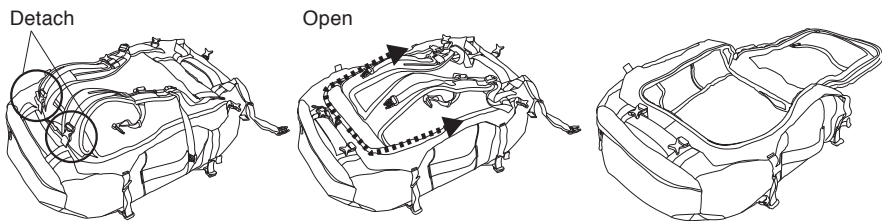

•Setting up as a backpack


*Ensure that the zipper is completely closed. Additionally, if the zipper sliders meet at a corner, the zipper may open while you are wearing the bag.

- ① Attach the male buckle of the shoulder strap to the female buckle at the bottom of the bag.

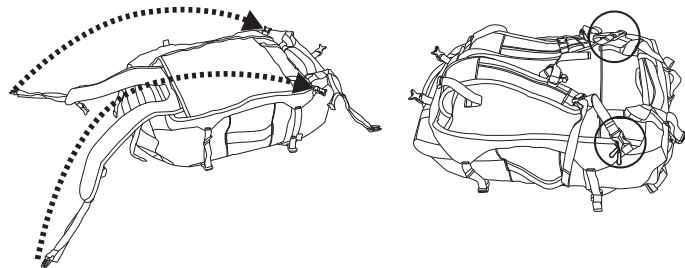


- ② Attach the shoulder stabilizers.

*Always attach the shoulder stabilizers when carrying the bag on your back as a backpack.

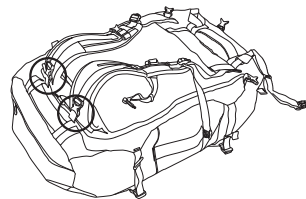


- ③ Attach the waist belt. *65L and 90L models only.

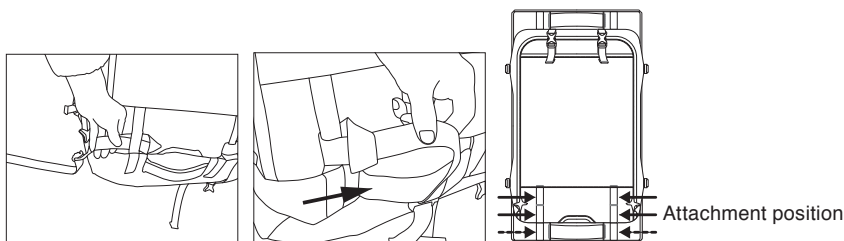

*If the height is not suitable, it can also be attached to the attachment loop.


●How to wear

- ①Wear the bag and tighten the waist belt at the hip bones, ensuring it does not compress your abdomen.
*The waist belt is included with the 65L and 90L models only.
- ②Pull the shoulder straps so that the shoulder harnesses fit your body.
If the fit is loose, adjust the position of the waist belt to a height that fits your body.
- ③Pull the shoulder stabilizers to bring the upper center of gravity closer to your body for stability.
- ④Fasten the chest belt to stabilize the shoulder harnesses. *65L and 90L models only.

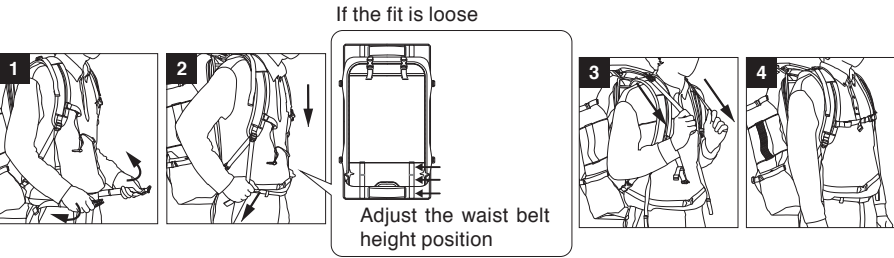


●Setting up as a container bag

- ①Unbuckle the shoulder harnesses.
- ②Tuck the shoulder harnesses into the storage pocket on the back.

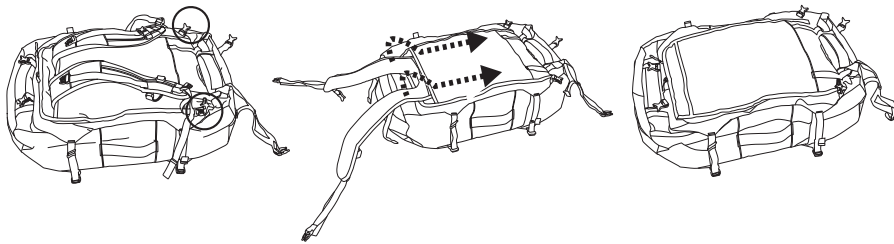


●Using the multi-belt

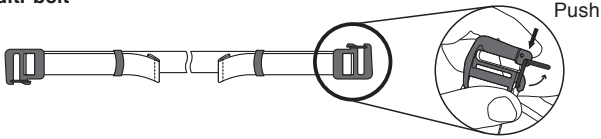


- Press the top of the hooks on both ends of the multi-belt as shown in the diagram to release the lock.
- Use caution, as the hook lock releases with force.
- After attaching the hook to the loop, return the lock to its original position and ensure it is securely fastened.

[Securing to the bag]

- *Can be attached to either the upper or lower side.
- ①Pass the multi-belt through the attachment loop on the back side.
- ②Place your items on the bag.
*When attaching the storage case, pass the multi-belt through the fixing loop on the top of the storage case to secure it.
- ③Hook the multi-belt into the attachment loop on the front side and secure it.

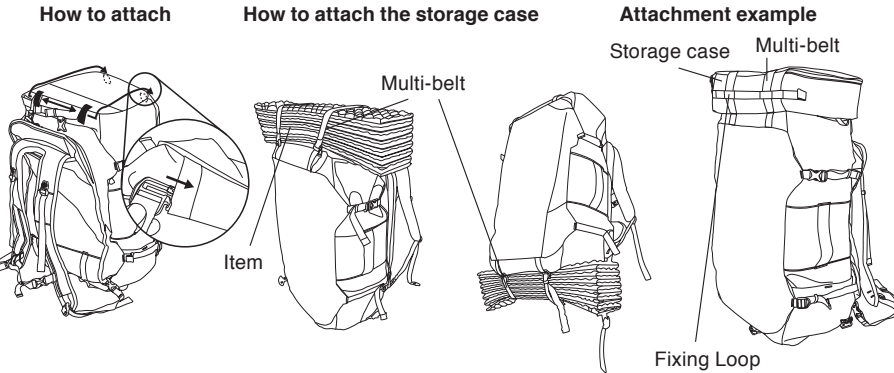


- [Using as a shoulder pouch]
Attachment example
Attach the multi-belt hooks at the positions shown in the diagram.

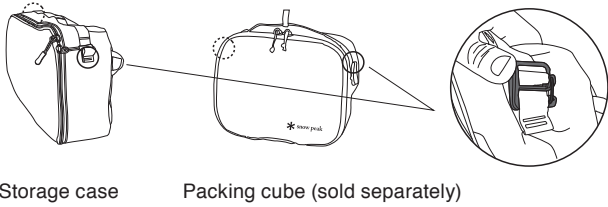

●Compression and fixation

- ①Compressing the bag
Compress the bag by tightening the four side compression belts located on the left and right sides.




*The same applies to the opposite side.

- ②Securing lengthy items
Secure lengthy items with the side compression belts. Use the side pockets for extra stability as needed.





- ③Attaching the storage case
Pass the side compression belts (with buckles) through the attachment loops on the storage case to attach it to the bag.

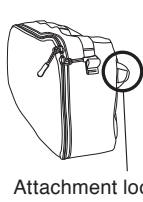

Side compression belt (with buckle)


●Attaching and removing the rain cover

- ①Remove the rain cover from the rain cover case.
- ②Pull the rain cover over the top of the bag and stretch it down to the bottom to attach.
*The rain cover may not fit if items are attached to the top of the bag or if large items are secured with the side compression belts.
- ③After use, remove any moisture or dirt from the rain cover.
- ④Fold the rain cover and store it back into the integrated rain cover case.

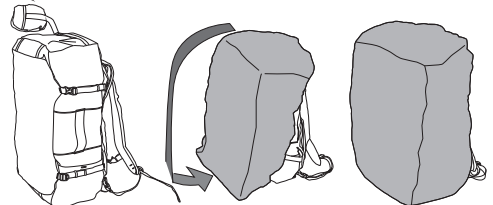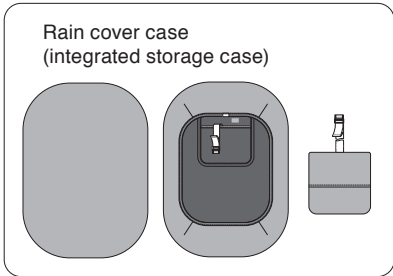

●Stowing in the storage case

- ①Ensure the bag is completely empty.
- ②Refer to "●Setting up as a container bag" and tuck the shoulder harnesses into the storage pocket on the back.
- ③Lay the bag with the shoulder harness side facing up. Fold the side panels inward so that they align with the width of the bag.
- ④Gradually fold the bag upward from the bottom, adjusting the fit as you stow it into the storage case.

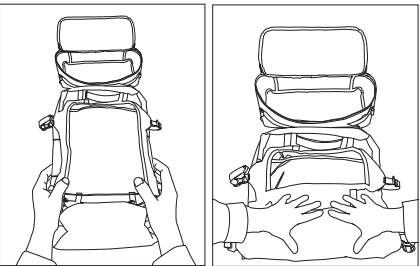

Maintenance

- Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair.
- Avoid using bleach, tumble dryers, or washing machines.
- To remove dirt, wipe clean with a well-wrung damp cloth.
- For heavy soiling, gently hand wash using a diluted solution of laundry detergent in cold or lukewarm water. After washing, reshape the bag and hang to dry in a shaded area away from direct sunlight.
- Do not use organic solvents such as thinner, benzene, or alcohol, as they may cause fading, discoloration, or peeling of the resin coating.

- Note that fabric coatings, webbing, and plastic components will naturally lose durability over time due to normal wear and aging.
- Do not leave the product wet for extended periods. This may lead to stains, odors, or deterioration.
- Thoroughly air-dry in the shade after use or cleaning. Store in a well-ventilated area away from direct sunlight.
- The material may deteriorate over a wide area depending on use. Products with reduced durability may not be repairable.
- Do not store the product in its storage case for extended periods. Trapped moisture may cause wrinkling or deterioration.

Warranty

- Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following.
1. Material deterioration caused by age
 2. Damage caused by modifications or rough handling
 3. Damage caused by inappropriate use not mentioned in the instruction manual
 4. Damage caused by unexpected accidents
 5. Any damage other than defects in the manufacturing process
 6. Damage caused by dust or rust
 7. Damage and defects caused by dismantling the product
 8. Damage and defects caused by dropping, jolting or other shocks
 9. Deterioration or failure of parts due to friction
 10. Damage caused by the use of the product in combination with another manufacturer's products

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
 - When you request repairs, please make sure that the product is dry and clean.
 - Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
 - Transportation and repair costs are determined as follows.
1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak.
 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

Snow Peak USA, Inc.
404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (888) 424-4916 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.
456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp

MADE IN VIETNAM