


ST-050 ジカロテーブル

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品は、スノーピーク製の焚火台L・M及び、剛炎を囲んで使用するテーブルです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止しご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

セット内容 (各部の名称)

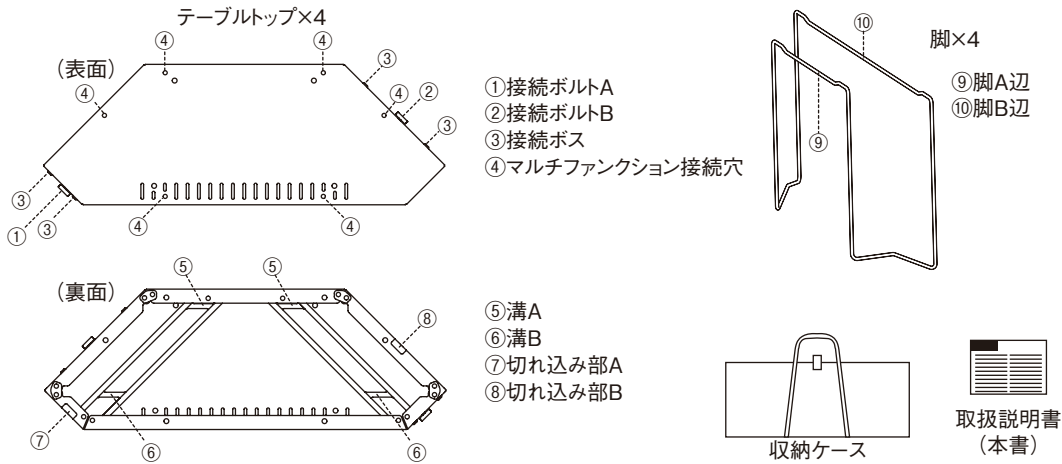


スペック

- 材質:テーブルトップ／ステンレス、脚／ステンレス、ツマミ／アルミニウム合金
- サイズ:焚火台L使用時／1,120×1,120×400 (h) mm (開口部／600×600mm) 剛炎使用時／890×890×400 (h) mm (開口部／370×370mm)
- 収納サイズ:745×170×400mm
- 重量:10.8kg

安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

⚠ 危険 明らかに生命に関わる重大な事故が予測される行為を示します。


- 本製品と併せてご使用になる各アイテムの取扱説明書を必ずお読みください。
- 火器を使用する際は、燃えやすい物(テントやタープ、乾いた草の上など)の下及び近くで使用しないでください。
- 天板の上で、ガス機器(ランタン・燃焼器)を使用しないでください。また可燃性の物や熱による影響を受けやすい物をテーブルの上に置かないでください。天板が高温になり火傷や天板の上にある物の破損の原因となります。

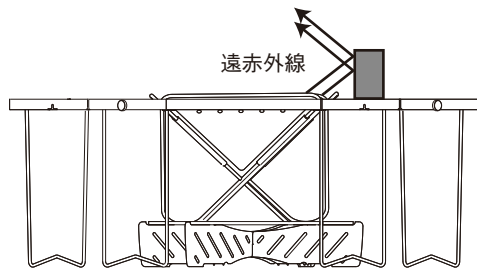

開口部付近及び、開口部付近に置かれた物は、熱源からの遠赤外線の影響を受け高温になる可能性があります。開口部付近には熱の影響を受けやすい物を置かず、火傷には十分注意してください。

⚠ 警告 取扱いを誤った場合、使用者が死亡または重症を負う可能性があることを示します。

- ご使用前に、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。
- 焚火で使用中は本製品を移動させないでください。製品が分解したり、思わぬ怪我の原因となります。
- 可燃性の物や熱による影響を受けやすい物をテーブルの上に置かないでください。
- 傾斜地や不安定な場所での使用は本体の転倒などにつながり重大な事故を招く恐れがあります。
- 本製品の移動や組立パターンの変更、またはアイテムの交換を行う場合は、必ず使用している火器の火が消え、各アイテムが十分に冷めている事を確認のうえ行ってください。火傷の原因となります。
- スノーピーク製の焚火台L・Mを使用する際は、故意に火柱をあげるような行為をしないでください。また、風が強く吹いている時などは薪を使つての焚火をしないでください。炎があらわれ、火傷や火事の原因となります。
- 炎天下ならびに使用するアイテムによっては本体や周囲が高温になる場合があります。火傷には十分に注意して下さい。
- 本製品の耐荷重はテーブルトップ一枚につき20kgです。それ以上の物を置かないでください。
- テーブルの上に乳幼児や小さいお子様を寝かせたり、座らせたりしないでください。
- テーブルトップに座ったり、手をついて体重をかけないでください。
- 使用中は火や周囲の状況などに細心の注意を払ってください。特に火器を使用している最中は小さいお子様からは目を離さず常に監視をしてください。
- 「使用方法」の項目をよく読み、正しくセッティングされている事を確認して使用してください。正しくセッティングされていない場合、転倒、火災、火傷の恐れがあり危険です。
- 使用する火器の各アイテムは、本製品の開口部中央にセットしてください。


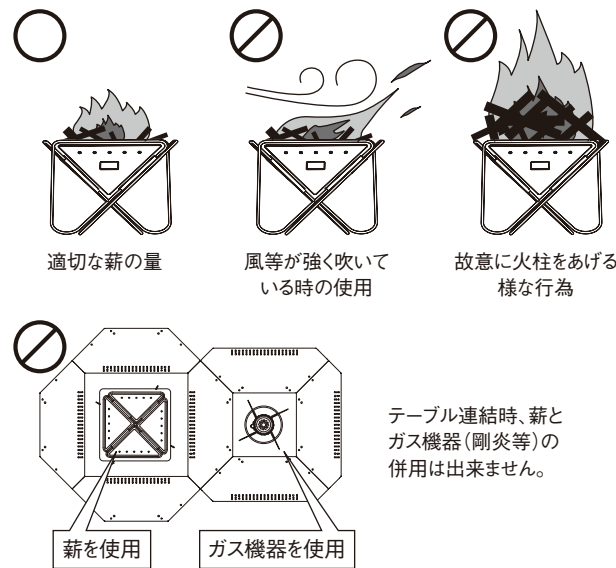


⚠ 注意 ケガや本体破損、物品破損として拡大被害の原因となる行為を示します。

- 開口部付近に、熱の影響を受けやすい物を置かないでください。
- 本製品は常設用ではありません。
- 本製品はステンレス材を使用していますが、ご使用条件によりサビが発生することがあります。
- 接続ボルトのネジ部に砂やゴミなどがこまめに注意してください。
- ご使用により、天板表面が退色や変色することがあります。また、局所的に温度が上がると変色が進行することがあります。
- 本製品を組み立てる際には、指などを挟まないように十分に注意してください。また、天板などの大きなパーツを小さなお子様や車などの他の財産にぶつける危険がありますので、周囲に十分注意してください。


使用方法

■ テーブルトップと脚の組立

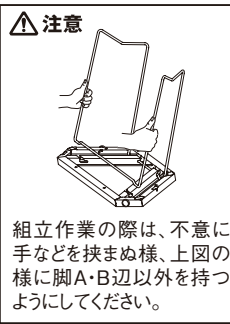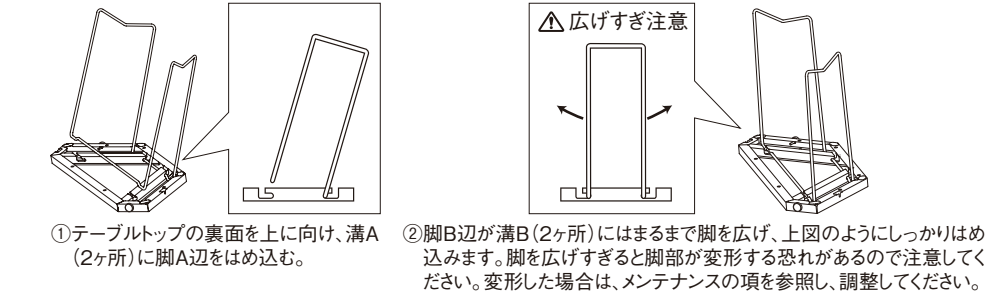

■ 組立パターン1 焚火台L・Mとの組み合わせ

組み立てた「テーブルトップと脚」を下図のように並べ、テーブルトップ同士を接続します。

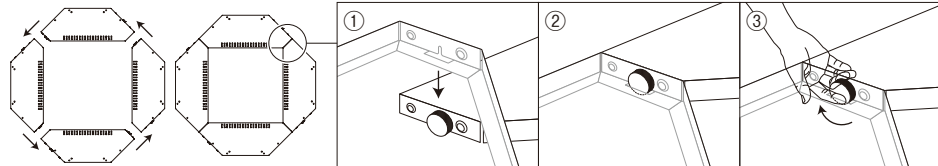


テーブルトップ同士の接続の仕方

- ①5～10mm程度ネジ部が見えるぐらいまで、接続ボルトAを緩め、接続ボルトのツマミ部分に、切れ込み部Aを被せます。
- ②接続ボスに対応するテーブルトップ側面のヘコミに嵌るように位置を調整します。
- ③切れ込み部Aから、指でなぞる様にして接続ボルトAのツマミを回し、テーブルトップの辺同士を近づけていきます。締め付けすぎに注意してください。

■ 組立パターン2 剛炎との組み合わせ


組み立てた「テーブルトップと脚」を下図のように並べ、テーブルトップ同士を接続します。

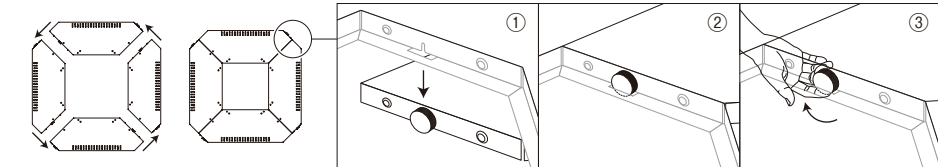

テーブルトップ同士の接続の仕方


- ①5～10mm程度ネジ部が見えるぐらいまで、接続ボルトBを緩め、接続ボルトのツマミ部分に、切れ込み部Bを被せます。
- ②接続ボスに対応するテーブルトップ側面のヘコミに嵌るように位置を調整します。
- ③切れ込み部Bから、指でなぞる様にして接続ボルトBのツマミを回し、テーブルトップの辺同士を近づけていきます。締め付けすぎに注意してください。

■ スノーピーク製マルチファンクションテーブル竹、マルチファンクションテーブルロング竹との接続

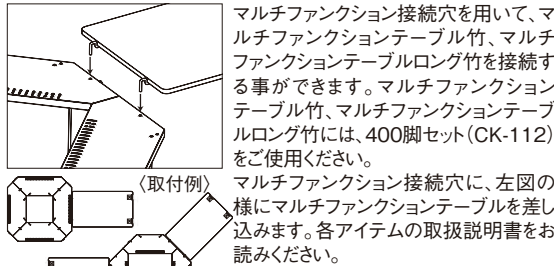

■ 収納

下図の様に、重ねた脚の間に、テーブルトップを4枚挟みます。重ねた脚の間にテーブルトップ4枚を挟み終えたら、収納ケースに入れてください。

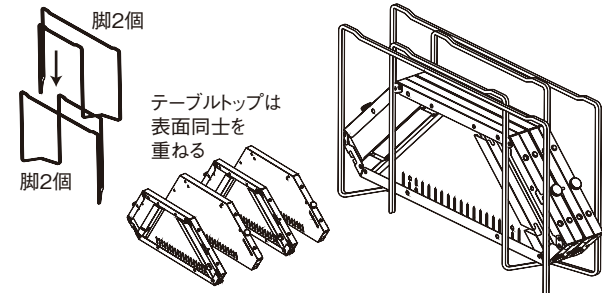

メンテナンスについて

- 長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止しお買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。
- 本製品を洗浄する場合は、硬い素材のたわしなどを使用すると傷の原因となります。柔らかい布やスポンジで洗浄してください。
- 保管をする場合は、直射日光の当たらない、風通しの良く湿気の少ない場所に保管してください。
- 軽い汚れや水分、油分が付着した場合は速やかに乾いた布で拭き取り、十分に乾燥させてください。
- 塩分(調味料等)や、その他の薬品が付着した場合は、固く絞った布でよく拭き取り、十分に乾燥させてください。
- 脚が広がり、「脚A辺と脚B辺」が「溝Aと溝Bのはめ込み位置」の間隔よりも離れてしまった場合は右図の様に平らな面に脚を置き、均等に力を加えて修正してください。

品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので予めご了承ください。1.素材の経年劣化による損害など商品の寿命 / 2.改造および粗雑な取扱いによる故障 / 3.取扱説明書で禁止されている取扱いによる故障 / 4.不測の事故による商品の故障 / 5.その他製造上の欠陥以外による製品の故障 / 6.ゴミやさびによる故障 / 7.分解したことによる不具合の発生または破損 / 8.落下やその他の衝撃による部品の変形や破損による不具合 / 9.摩擦によるパーツの変化及びそれによる故障 / 10.他社製品との組み合わせによる故障

修理について

●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。 / 2.保証対象以外の場合:往復運賃並びに修理費は、お客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、販売店様または弊社ユーザーサービスまでお問い合わせください。

スノーピークユーザーサービス


☎ 0120-010-660 (9:00～17:00)
Email:userservice@snowpeak.co.jp

株式会社スノーピーク
〒955-0147 新潟県三条市中野原456
Tel. 0256-46-5858 / Fax. 0256-46-5860
www.snowpeak.co.jp

ST-050 Jikaro Fire Ring Table

Thank you for purchasing a Snow Peak product. This product is a table to use around the Pack & Carry Fireplace (L)/(M) and the GigaPower LI Stove (GS-1000). For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

Contents (Name of the Parts)

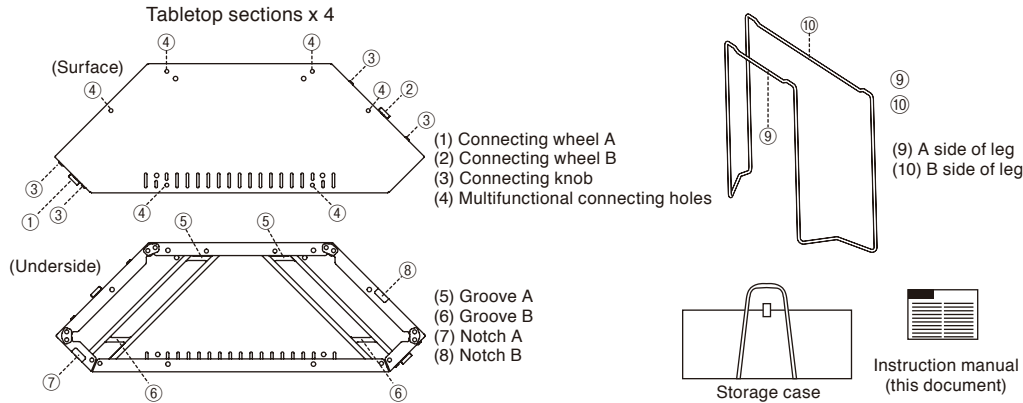


Specifications

- Materials: Tabletop: Stainless steel, Legs: Stainless steel, Knobs: Aluminum alloy
- Size: Large Configuration Dimensions/ 1,120×1,120×400(h)mm (44.1"×44.1"×15.7"(h)) *Opening / 600×600mm (23.6"×23.6"), Small Configuration Dimensions/ 890×890×400(h)mm (35.0"×35.0"×15.7"(h)) *Opening / 370×370mm (14.6"×14.6")
- Storage size: 745×170×400mm / 29.3"×6.7"×15.7"
- Weight: 10.5 kg / 23 lbs

Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.



⚠ DANGER / Misuse could easily result in a serious accident or death.

- Read the instruction manuals for each item you are using in combination with this product.
- When using any devices that involve fire, do not use under or near anything that combusts easily (tent, tarp, dry grass, etc.).
- Do not use gas appliances (lanterns, gas burners) on the top panel. Also, do not place flammable or heat-sensitive items on the tabletop. If do so, the tabletop will become hot, which may cause burns or damage to items on the tabletop.

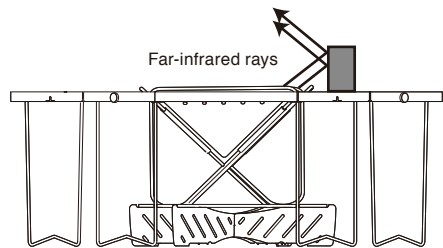

⚠ WARNING / Misuse could result in serious injury or death.

- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair.
- Do not move this product while the fire is in use. It may cause the product to disassemble or cause unintentional injury.
- Do not place combustible objects or objects that are easily affected by heat on the tabletop.
- Do not use this product on sloping or unstable ground, as this could lead to it tipping over, which could cause serious accidents.
- If you are moving this product, changing its assembly pattern, or changing any other items, extinguish any flames in the Fireplace or Stove and ensure that all items have sufficiently cooled first. Failure to do so may result in burns.
- When using the Snow Peak Pack & Carry Fireplace L/M, do not intentionally make a pillar of fire. Also, do not build a fire with wood when the wind is blowing strongly. Doing so may rise up flames and cause burns or fire.
- Depending on the items used, in addition to strong sunlight, this product and its surrounding area may become extremely hot. Take care not to get burned.
- The maximum load of this product is 20kg per tabletop section. Do not place anything exceeding that weight on top.
- Do not allow infants or small children to lie or sit on the table.
- Do not sit or lean on the tabletop.
- Pay close attention to the fire and surrounding environment during use. Especially keep a constant watch over small children while fire is being used.
- Read the "How to use" section thoroughly, and only use this product after confirming that it is set up correctly. The product could tip over or cause a fire or burns if not set up correctly.
- Place the source of fire being used directly in the center of the product's opening.


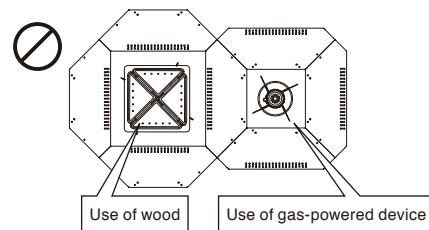
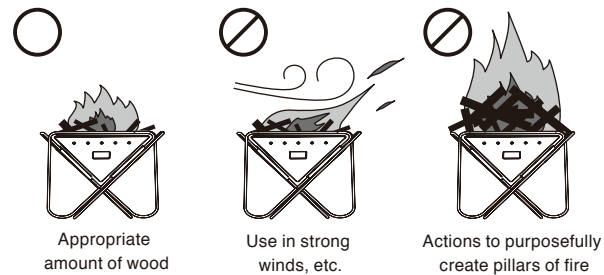


⚠ CAUTION / Misuse could result in injury to the user and/or damage to property.

- Do not place any objects that are easily affected by heat near the opening.
- This product is not meant for permanent use.
- Although the main unit is made of stainless steel, certain conditions may cause it to rust.
- Ensure that the threading of the connecting wheels does not get sand or dirt in it.
- The surface of the top panel may fade or discolor with use. Discoloration may also occur when the temperature is raised partially.
- When assembling this product, please be very careful not to pinch your fingers or other objects. Also, there is a danger of large parts such as the top panel hitting small children or other property such as cars. Please be careful of your surroundings.


Instructions for Use

●Assembling the tabletop and legs

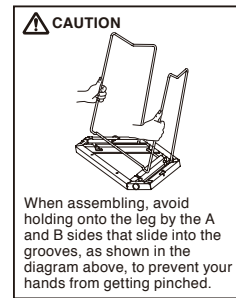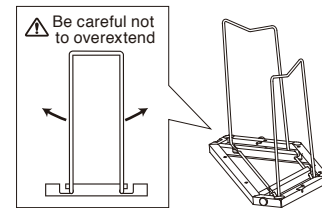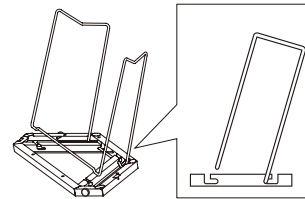

●Assembly pattern 1 (combined with the Pack & Carry Fireplace (L)/(M))

Line up the 4 assembled tabletop and leg components as shown in the diagram below, and connect the tabletop sections together.

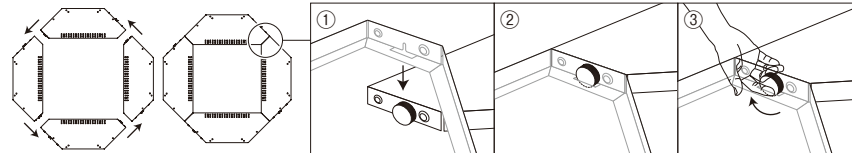


How to connect the tabletop sections together

- (1) Loosen the connecting wheels A until about 5 to 10mm of each screw is visible. Slide the notches A into the knob portions of the connecting wheels.
- (2) Adjust the positioning so that the connecting knobs are engaged with the indents on the sides of the tabletop sections.
- (3) Turn the knobs on the connecting wheels A by running your finger along them from the notches A, bringing the tabletop sections together. Be careful not to overtighten.

●Assembly pattern 2 (combined with the GigaPower LI Stove)


Line up the 4 assembled tabletop and leg components as shown in the diagram below, and connect the tabletop sections together.

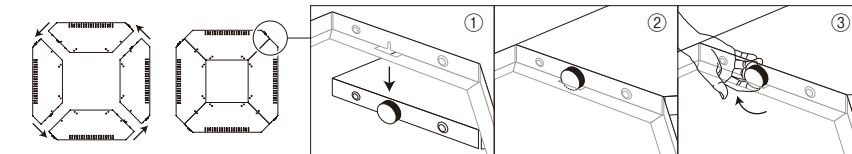

How to connect the tabletop sections together

- (1) Loosen the connecting wheels B until about 5 to 10mm of each screw is visible. Slide the notches B into the knob portions of the connecting wheels.
- (2) Adjust the positioning so that the connecting knobs are engaged with the indents on the side of the tabletop sections.
- (3) Turn the knobs on the connecting wheels B by running your finger along them from the notches B, bringing the tabletop sections together. Be careful not to overtighten.


●Connection with a Bamboo IGT Table Regular or Bamboo IGT Table Long

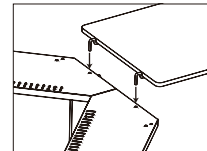

The Jikaro Table can be connected to a Bamboo IGT Table Regular or Bamboo IGT Table Long using the multifunctional connecting holes. Use the IGT 400 Leg Set (CK-112) for the Bamboo IGT Table Regular or Bamboo IGT Table Long. Insert the hooks on one end of the Bamboo IGT Table into the multifunctional connecting holes, as shown in the diagram to the left. Read the instruction manual for each item before use.

●Storage

Place the four tabletop sections between the legs, which have been stacked together as shown in the diagram below. Place everything into the storage case.

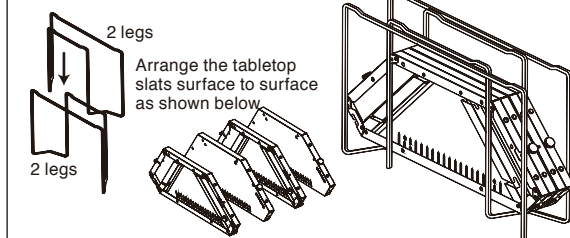


⚠ CAUTION

- If you try to carry the disassembled table parts by holding on to the A and B sides of the legs, the tabletop sections may fall out. Be sure to place everything inside the storage case, or carry the stacked tabletops and the stacked legs separately.

Maintenance

- Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair.
- When cleaning this product, do not use a hard scrubbing brush, etc. as it may cause scratches. Use a soft cloth or sponge to clean the product.
- Store out of direct sunlight in a well-ventilated area with little humidity.
- If light grime or water gets on this product, promptly wipe with a dry cloth and allow it to dry sufficiently.
- If salt (seasoning, etc.) or other chemicals get on this product, wipe thoroughly with a well-wrung cloth and allow it to dry sufficiently.
- If you overextend a leg past the point at which the A side and B side of the leg align with groove A and groove B, place the leg on a flat surface and correct it by placing even pressure onto it, as shown in the diagram to the right.

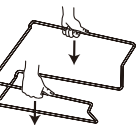

Warranty

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by inappropriate use not mentioned in the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8. Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

Repair

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service.
- When you request repairs, please make sure that the product is dry and clean.
- Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred.
- Transportation and repair costs are determined as follows. 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak. / 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.

Snow Peak USA, Inc.

404 NW 23rd Avenue, Portland, Oregon 97210, USA
Tel. +1 (503) 461-0781 / Instagram. @snowpeakusa
Email. info@snowpeak.com / www.snowpeak.com

Snow Peak, Inc.

456, Nakanohara, Sanjo-Shi, Niigata 955-0147 Japan
Tel. +81 256-46-5858 / Fax. +81 256-46-5860
www.snowpeak.co.jp