

## TP-259-2 ランドネストシェルター ルーフシート

この度は、スノーピーク製品をお買い上げいただき、誠にありがとうございます。本製品はランドネストシェルター( TP-259)専用のルーフシートです。安全にご使用いただくためにも下記の取扱説明書をよく読んでからご使用ください。また、読み終わった後も大切に保管してください。説明内容で理解出来ない点及び製品に不具合が確認された際には直ちに使用を中止し、ご購入いただきました販売店様もしくは弊社ユーザーサービスまでお問い合わせください。

### セット内容(各部の名称)



ルーフシート本体

収納ケース



取扱説明書(本書)

### スペック

- 材質:本体/75D、ポリエスルタフ・PUコーティング耐水圧1,800mmミニマム・撥水加工・UVカット加工
- サイズ:360×255cm
- 収納サイズ:23×57(h)cm
- 重量:1.0kg

### 安全上の注意事項 ご使用の前によく読んで予測される事故を回避し安全にご使用ください。

#### 危険 明らかに生命に関わる重大な事故が予測される行為を示します。

- このルーフシートの素材は難燃性ではありません。火や高熱源の近くで使用したり置かないでください

#### 警告 取扱いを誤った場合、使用者が死亡または重傷を負う可能性があることを示します。

- ご使用の前に本製品を点検し、各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止し、お買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。●気象状況には常に細心の注意を払
- い、風の強い時や悪天候が予想されるときは速やかに撤収して安全な場所へ避難してください。●風の吹き抜けるような場所や、雪崩、かけ崩れ、急な洪水や氾濫などのおそれのない地盤のしっかりとした、水はけの良い平坦な場所を選んで設営してください。


#### 注意 ケガや本体破損、物品破損として拡大損害の原因となる行為を示します。

- 本製品は常設用ではありません。ルーフシートの素材は長時間日光にさらされた場合、退色や生地劣化などの強度低下を起こしますので、常設用として使用しないでください。●日差しによりルーフシートの表面は低温やけどに発展するほど高温になります。十分にご注意ください。●焚火や花火などのそばで組み立てたり、使用しないでください。設営・撤収の際には、周囲に火気がないことを確認してください。火の粉を被ると生地に穴が開いてしまいます。●ルーフシートの設営・撤収の際は、風に飛ばされないよう本体をしっかりと支えて作業してください。作業は必ず2人以上でおこなってください。●フックとロープでしっかりとシェルターと固定してください。●薄い生地を使用していますので、生地を引っ張りすぎると破損するおそれがあります。ご注意ください。●足もとのビルディングテープ、ロープやペグ等にはご注意ください。足を引っ掛けで転倒し、思わぬ事故の原因となります。●十分に乾燥してから収納してください。●強風時は、風が吸まるのを待ってから撤収してください。●インナールームを取り付けた場合や、別のテント/タープ等を併用している場合は、必ず併用していた製品を本体から取りはずしてから撤収をはじめてください。●空気中に含まれている水分が急激に冷やされて霧状になったものが結露として現れます。特にテントやシェルター等の限られた空間では、中にいる人間の水分が呼吸や汗などにより空気中に放出され水蒸気となり、通常
- の室内よりも水蒸気の濃度が高くなり、結露の発生する確率が高くなります。結露は優れた透湿防水素材でも使用状況により完全に防ぐことは不可能です。ご使用中は結露軽減のため、こまめに適時換気を行ってください。●本体の生地には撥水加工を施していますが、生地の特性上、撥水性能(撥水の仕方や耐久性)に若干の差が見られる場合があります。また、ご使用を重ねますと撥水性能が低下する場合があります。性能が低下した場合は市販の撥水スプレー等、それらの説明書をよくお読みの上ご使用ください。●防水性の高い生地を使用しておりますが、地面の水溜りなどへ長時間接触していると雨水が浸み込む場合があります。●農薬などでPUコーティングが破壊され耐水圧が異常低下してしまう場合があります。この症状と判断された場合、製品の保証が出来なくなりますのでご注意ください。●本体の生地にはUVカット加工を施しています。※UVカット加工は、紫外線による人体への影響や、素材劣化を防止するものではありません。●ルーフシートの素材は長時間日光にさらされた場合、退色や生地劣化などの強度低下を起こしますので、常設用として使用しないでください。●紫外線の影響と思われる素材の劣化により、耐久度合いを超えたものは弊社でも修理できない場合があります。


### 使用方法

#### 設営の手順



設営・撤収は以下の説明に従い、繰り返し練習し、実際のキャンプに備えてください。また、付属品が全て揃っているか、前もってご確認ください。無理な設営・撤収は本体やフレームの破損や事故の原因になります。本書をよくお読みになりご使用ください。

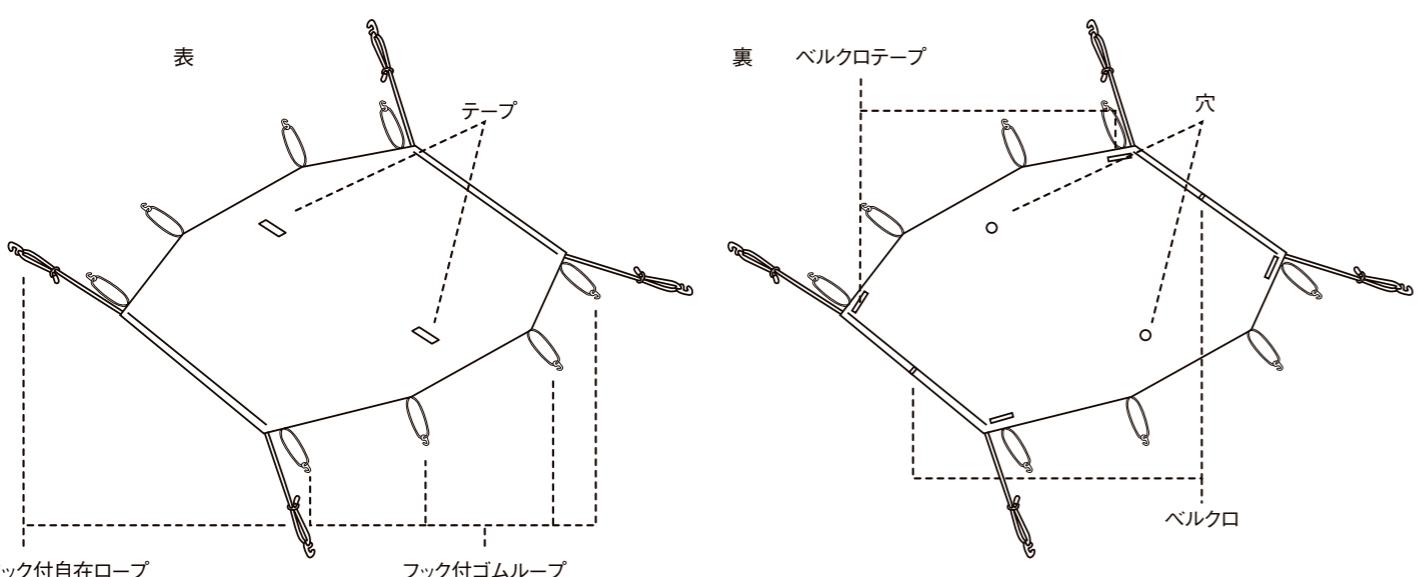


①ルーフシートをシェルターの前に裏面(ベルクロと穴がある面)が上を向くように広げてください。

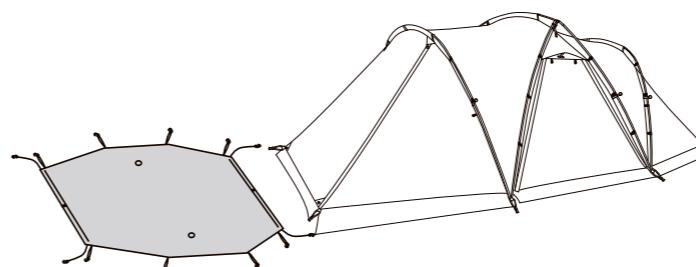



②ルーフシートは裏返しのまま、本体側にあるベルクロテープ(2箇所)をAの箇所に巻きつけてください。

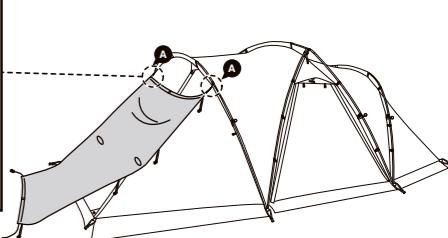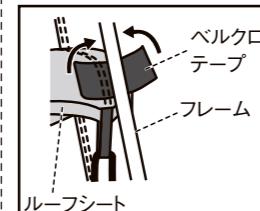


③2人がルーフシートの端のフック付自在ロープをそれぞれ持ち、ルーフシートをひっくり返しながら後側までシェルターにかぶせてください。

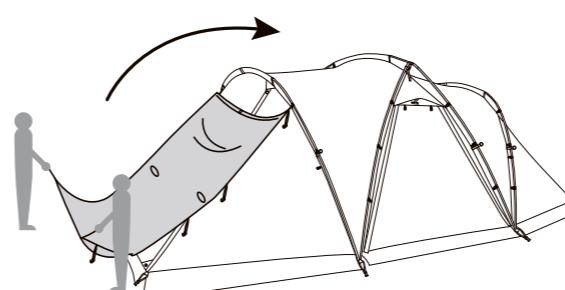


④ルーフシート各コーナーの裏面にある残りのベルクロテープ(全6カ所)をシェルターの各フレームに巻きつけてください。またルーフシートのCフレームスリープ中央とルーフシート裏側もベルクロで固定します。このとき、リジジポールの両端をルーフシートの穴に通して外から見えるようにしてください。

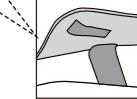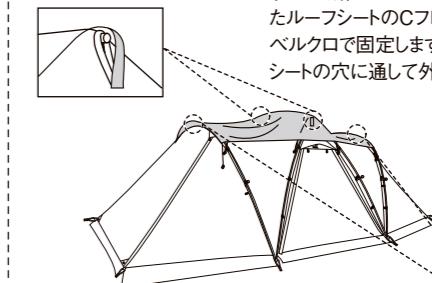

⑤ルーフシートの四の箇所にあるプラスチックフックが付いているテープのリングに自在付きのロープのフックを引っ掛けください。フックを引っ掛けた後、自在付きロープの自在を使いロープの貼り具合を調整してください。

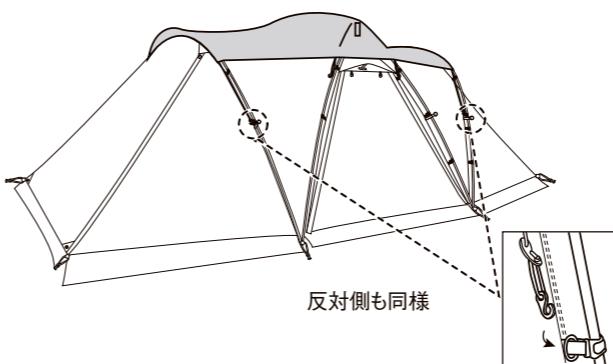

⑥ルーフシートの残りのフック(全8ヶ所)を本体のプラスチックが付いているテープのリングに引っ掛けください。

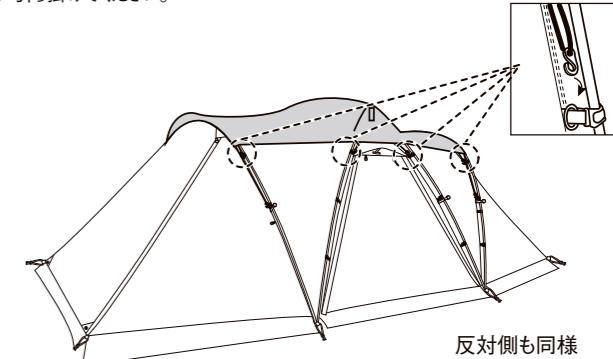

### メンテナンスについて

●長期間ご使用しなかった製品を再度お使いになる際は、本製品を点検し各部に異常がないことを確認してください。異常が発見された場合は、直ちに使用を中止し、お買い求めいただいた販売店様、または弊社ユーザーサービス係に点検または修理を依頼してください。●長期間ご使用しなかった製品を再度お使いになる際は、製品および内容物をよく点検してください。不明な点がありましたら弊社ユーザーサービスまでご連絡ください。●本製品はポリエスルタフ生地を組み合わせて使用しています。生地の特性を考慮し、できる限り色移りし難い加工と配色パターンを採用していますが、保管状態などにより、色移りが発生する場合があります。ご了承ください。また、濡れたままの保管は避けてください。●濡れたまま保管すると、カビや悪臭、生地の色移り、生地の劣化などのトラブルの原因になりますので、使用後は風通しの良い日陰で十分に乾燥し、柔らかいブラシなどで泥汚れを落としてから保管してください。●高温多湿を避け、直射日光の当たらない風通しのよい場所に保管してください。●小さな生地の破損は市販のリペアテープで補修できます。補修の際はリペアテープの説明書をよくお読みください。●ご使用により広範囲にわたり素材が劣化し、耐久度を超えたものは修理できない場合があります。●シームテープはPUコーティングが痛まない程度の温度設定で圧着されていますが、使用を重ねにしたがい剥離してしまう場合があります。剥離が確認された場合は、アイロンを低温に設定し、剥離箇所のみ再度圧着してください。熱を掛け過ぎた場合、生地が変色したり劣化が促進されますのでご注意ください。シームテープは無理やり剥離させないでください。PUコーティングが一緒に剥離された場合、修理できなくなる可能性があります。●樹液が付着してしまうときれいに除去することはできません。樹液が垂れそうな木の下を避けて設営してください。溶剤などにより無理に除去すると生地やコーティングを傷めます。●次回のキャンプに備え、上記の通り十分に保守、点検をしてください。

### 品質保証について

お買い求めいただきました製品は万全を期していますが、万一不備な点がございましたら、お買い求めいただいた販売店様もしくは弊社または各製品に記載された連絡先にご相談ください。製造上の欠陥が原因の場合は無償で修理または交換させていただきます。その他の場合は適切な価格で修理させていただきます。修理、交換の判断は弊社の裁量によるものとさせていただきます。また、以下の場合は修理できない場合もありますので、ご了承ください。1.素材の経年劣化による損害など商品の寿命 / 2.改造および粗雑な取扱いによる故障 / 3.取扱説明書で禁止されている取扱いによる故障 / 4.不測の事故による商品の故障 / 5.その他製造上の欠陥以外による製品の故障 / 6.ゴミやさびによる故障 / 7.分解したことによる不具合の発生または破損 / 8.落下やその他の衝撃による部品の変形や破損による不具合 / 9.摩擦によるパーツの変化及びそれによる故障 / 10.他社製品との組み合わせによる故障

### 修理について

●本格的な修理が必要な場合は、お買い求めになった販売店様または弊社ユーザーサービスまでお問い合わせください。●修理を依頼される場合は、必ず十分に乾燥させ、汚れをきれいに落としてください。●修理品には修理箇所がはっきりと解るように、必ずメモまたは荷札を付けてください。また、破損時の状況をできるだけ詳しく書いたメモを添えてください。●修理品の運賃並びに修理費については以下のように規定させていただきます。1.保証対象の場合:往復運賃並びに修理費は弊社にて負担いたします。/ 2.保証対象以外の場合:往復運賃並びに修理費はお客様のご負担とさせていただきます。

不明な点やお気付きの点がございましたら、**スノーピークユーザーサービス**  
販売店様または弊社ユーザーサービスまで **0120-010-660**(9:00~17:00)  
お問い合わせください。



株式会社スノーピーク  
〒955-0147 新潟県三条市中野原456  
Tel. 0256-46-5858 / Fax. 0256-46-5860  
www.snowpeak.co.jp

MADE IN VIETNAM

**TP-259-2**

## Land Nest Shelter Roof Sheet

Thank you for purchasing a Snow Peak product. This product is a roof sheet for Land Nest Shelter (TP-259). For safety, read the following instruction manual before use. Please keep it safe for future reference. Finally, if you find anything that you do not understand in the description or any problems with the product, please stop use immediately and contact the retailer or Snow Peak Customer Service.

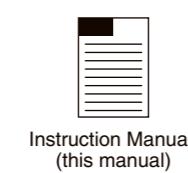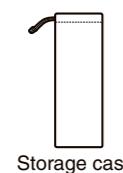**Contents (Name of the Parts)**

**Specification**

- Materials: Main unit - 75D Polyester Taffeta with PU coating, water pressure resistance: 1,800mm minimum, water-repellent finish, UV protection treatment
- Size: 360x255cm
- Storage Size: 23x57(h)cm
- Weight: 1.0kg

**Safety Precautions: Before use, please read thoroughly to ensure safety and avoid accidents.**
**DANGER / Misuse could easily result in a serious accident or death.**

- The material of this product is not flame-proof. Do not use combustion-based heat sources such as lanterns, stoves, or heaters, or open flames such as matches, candles, lighters, or cigarettes, near the product.

**WARNING / Misuse could result in serious injury or death.**


- Before using the product, check each part for abnormalities. If there are abnormalities, take the product to the dealer or Snow Peak Customer Service for inspection or repair. •Pay close attention to the weather. If extreme weather is in the forecast, pack up camp and evacuate to a safe place.
- Choose a flat, well-drained area with firm ground to pitch the tent. Choose a place with no chance of avalanches, landslides, wind gusts, or sudden flooding.

**CAUTION / Misuse could result in injury to the user and/or damage to property.**


- This product is not intended to be in permanent use. If the shelter is left in the sun for long periods, the materials may fade in color, or the fabric may deteriorate and lose strength. Do not leave the product set up permanently. •Sunlight can cause the surface of the product to heat up, potentially causing low-temperature burns. •Do not assemble or use the product close to a bonfire, fireworks, etc. Flying sparks can create holes in the fabric. •Firmly hold the product when assembling and disassembling. Unexpected accidents may occur due to the frame ends recoiling, etc., so ensure that the surroundings are safe, with no other people in the vicinity. Always assemble/disassemble this product with two or more people. •Firmly secure the pegs, guy lines, etc. •Because this product uses a thin fabric, it may break if you pull the fabric too much. •The inner room has a loop for hanging small items. Please only hang items that weigh less than 1kg (2.2lbs). •Please make sure that the product is sufficiently dry before storing it. •If the wind is strong, wait for it to subside before disassembling the product. •If you have attached an inner room, be sure to remove the inner room or any other items from the product before disassembling it. •Mist is a collection of water droplets suspended in the air that turns into condensation in rapidly falling temperatures. In smaller spaces such as the inside of a tent or shelter, water vapor concentration is higher than in an ordinary room and frequently results in more condensation. Depending on the surrounding conditions, it may be impossible to avoid condensation completely, even with waterproof materials. To reduce condensation, allow steady ventilation while the tent is in use. •The fabric of the product is treated with a high-quality, water-repellent finish. However, the level of water-repellent capacity and durability may vary slightly due to the characteristics of each material. The water-repellent finish will lose effectiveness after repeated use. When the water repellence decreases, please use a water-repellent spray purchased from your local outdoor gear retailer. When using such sprays, please follow the product's instructions. •Although this product is made of highly waterproof fabric, rainwater may soak into it if it is in contact with water pools on the ground for a long time. •The PU coating may be damaged by agricultural chemicals, which cause the water pressure resistance to decrease abnormally. Please note that the product cannot be subject to warranty if damaged by agricultural chemicals. •A UV protection treatment has been applied to the material of the product. \* The UV protection treatment does not completely shield humans from ultraviolet rays or stop the deterioration of the material's strength. •When the product material is exposed to sunlight for long periods, color degradation or strength deterioration may occur. Do not leave the product assembled permanently. •If the material deteriorates due to ultraviolet rays and is badly damaged, it may become irreparable.

**Instructions for Use**
**Setup Procedure**


Follow the instructions below to practice setting up and packing up this product several times in order to prepare yourself for the actual camping. Check in advance that all accessories are supplied. Inadequate setup and packing up may result in damage to the main unit or the frames and further lead to accidents. Carefully read this document to ensure correct use.

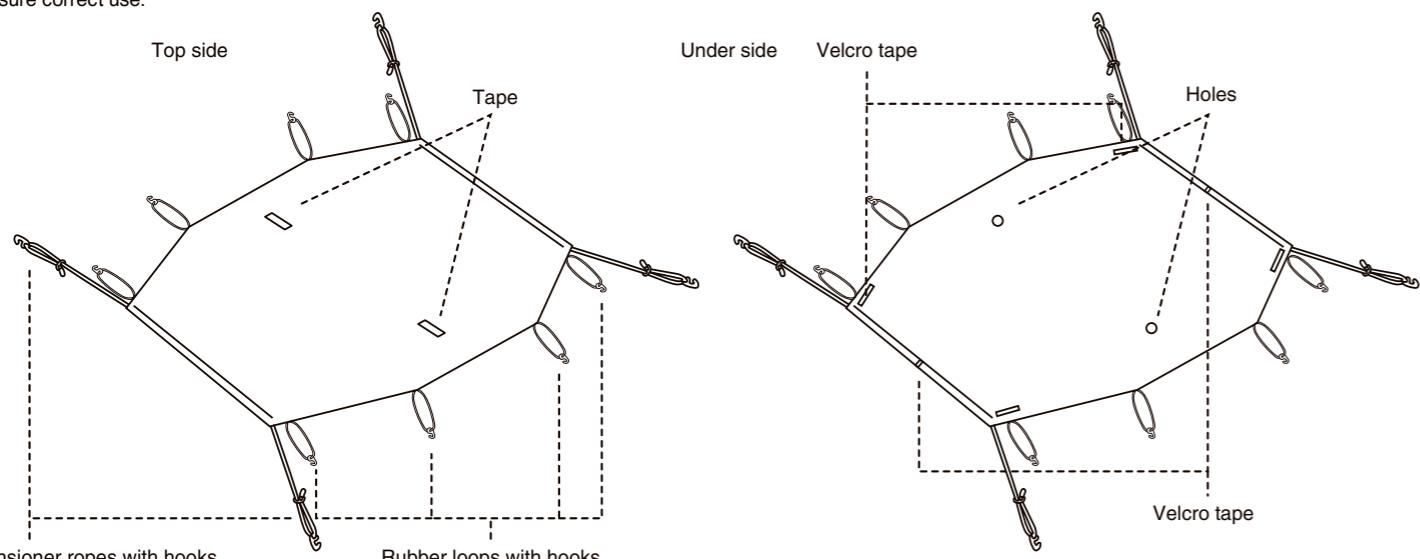


- ①Spread the roof sheet with the bottom side (side with velcro tapes and holes) facing up, in front of the shelter.

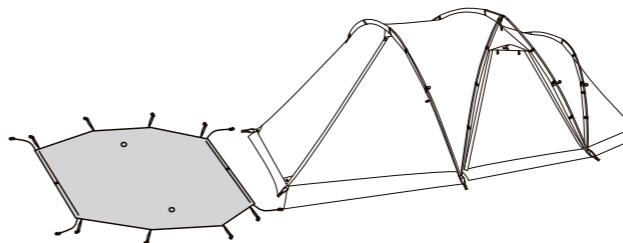


- ②With the roof sheet upside-down, wind the two velcro tapes on the main unit side around ①.

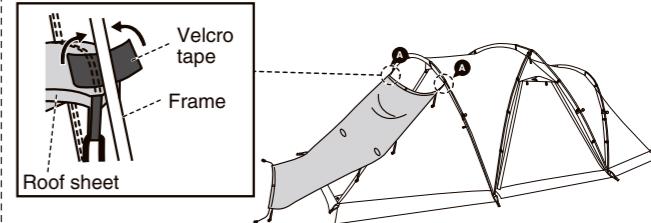


- ③Two people, each holding a tensioner rope with hook at the end of the roof sheet, place the roof sheet over the shelter (all the way to the back) as they turn the roof sheet over.

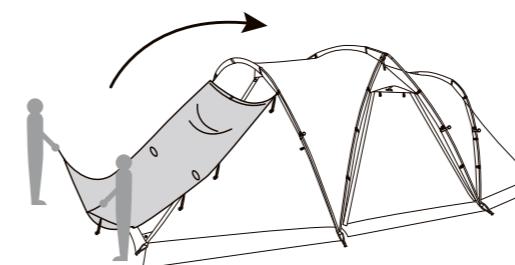

- ④Wind the remaining six velcro tapes on the bottom side of the corners of the roof sheet around the frames of the shelter. Fasten the center of the C frame sleeve and the bottom side of the roof sheet with velcro tapes. When doing so, pass both ends of the ridge pole through the holes in the roof sheet, making them visible from the outside.

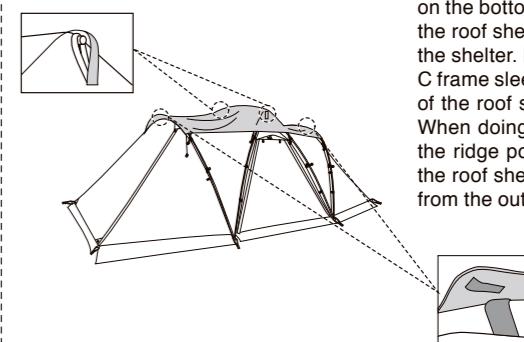


- ⑤Attach the hooks of the tensioner rope to the rings on the tapes that have plastic hooks as shown in the illustration of the roof sheet. After attaching the hooks, adjust the tension of the rope by using the tensioner of the tensioner rope.

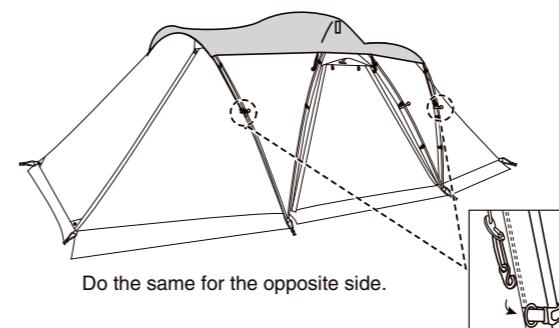

Do the same for the opposite side.

- ⑥Attach the remaining eight hooks on the roof sheet to the rings of the tapes with plastic hooks on the main unit.

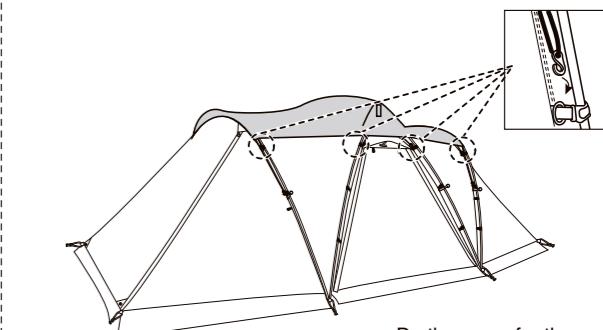

Do the same for the opposite side.

**Maintenance**

- Before using a product that has been in storage for a long time, check each part for abnormalities. If there are abnormalities, take the product to the retailer or contact Snow Peak Customer Service for inspection or repair. •When using a product that has been in storage for a long time, carefully check each part. If you have any questions, please contact Snow Peak Customer Service. •A polyester fabric blend is used for this product. Considering the material characteristics, we adopted processing and color patterns that will result in less color migration. However, depending on storage conditions, slight color migration may occur. Do not store the product while it is wet. •Before storage, the product should be cleaned and dried sufficiently. If the product is stored when wet, the build-up of mold, bad odors, color migration, and material deterioration will occur. Dry the product sufficiently in a breezy and shaded area and clean the surface with a soft brush before storing. •Please store in a well-ventilated area away from direct sunlight, high temperatures, and humidity. •Small areas of fabric damage can be fixed with repair tape. Please read the repair tape manual carefully before applying. •Depending on the conditions during use, the product material may deteriorate over a wide area, losing its durability and becoming irreparable. •Seam tape is pressure-capped at a temperature setting that prevents damage to the PU coating. However, it may peel off as it is used repeatedly. If peeling is found, set an iron at a low temperature and reattach only the peeling sections. Be aware that excessive heat will discolor or accelerate the deterioration of the fabric. If the PU coating peels off completely, it may be impossible to repair. •Sap cannot be easily removed. Do not set up this product under trees that frequently drop sap. If the sap is forcibly removed with a solvent, etc., the fabric or coating may be damaged. •To maximize the longevity of this product, regularly check and maintain the product (including all accessories such as the pegs).

**Warranty**

Snow Peak has taken all possible measures to ensure every product is durable and functions correctly. If you find any product defects, please contact the retailer where you purchased the product or Snow Peak Customer Service. If there are apparent defects in the product's manufacturing, the defective product will be repaired or exchanged free of charge. In other cases, Snow Peak will repair the product for an appropriate fee. The decision to repair or replace the product will be at our discretion. Snow Peak will not repair the product for any damage that occurred due to the following: 1. Material deterioration caused by age. / 2. Damage caused by modifications or rough handling. / 3. Damage caused by inappropriate use not mentioned in the instruction manual. / 4. Damage caused by unexpected accidents. / 5. Any damage other than defects in the manufacturing process. / 6. Damage caused by dust or rust. / 7. Damage and defects caused by dismantling the product. / 8. Damage and defects caused by dropping, jolting or other shocks. / 9. Deterioration or failure of parts due to friction. / 10. Damage caused by the use of the product in combination with another manufacturer's products.

**Repair**

- If professional repairs are required, please contact the retailer where you purchased the product or Snow Peak Customer Service. •When you request repairs, please make sure that the product is dry and clean. •Please attach a memo or a tag indicating the necessary repair and please write details of how and when the damage occurred. •Transportation and repair costs are determined as follows: 1. Within warranty: The transportation cost (both ways) and repair cost will be covered by Snow Peak. / 2. Outside warranty: The transportation cost (both ways) and repair cost will be covered by the customer.